Charles's Room

M019









M019 Instruction Manual

Notes before assembling

Making tips

1. LED wiring indication:
White=Positive;Grey=Negative.
2.Use a craft blade to carefully skim over the plastic to bare the copper wire.
3. For LED wiring extension, please refer to the below steps:

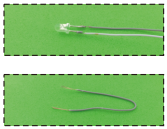



Twist the copper of both LED wire and extension wire together.



Do the same on the white wire.
Remarks: Tie a knot at the end of the grey wire to differentiate the polarity.

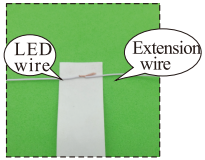

Place the duly twist wire on the tapes provided.



Roll and wrap the wire.

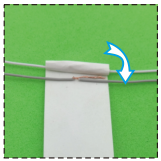

Place another wire next to it.
Remarks: DO NOT contact both copper wire to avoid short circuit.



Roll and wrap it together.

Warnings

- The product is not suitable for children under 14 years old. The should be under custody of adults when playing with the product.
- There are small parts, please do not swallow them for avoiding dangerous accidents.
- Please also play attention to the sharp-pointed materials to avoid injuries.

Tips for assembling

1.Picures shown on the package may be slightly different from the actual product.
2.Please use the provided tracing paper for cutting purpose to achieve the best outcome.
3.Product designs and specification may be subject to change without advance notice for purpose of making improvement.
4.Testing on LED function:

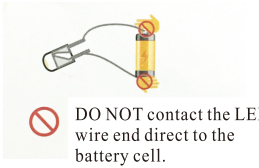

DO NOT contact the LED wire end direct to the battery cell.



Use the provide battery holder. Make sue the correct polarity.

How to assemble the battery holder



1.Material and tools needed:
- Battery holder, LED bulb, tape, screw driver and 2 piece AA size battery(not provided)



2. Use screw driver and take the lid off from the battery holder.



3. Insert the battery take notes on the polarity.

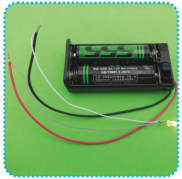

4. Connect the red wire to grey wire. Connect the black wire to white wire.



5.Wrap the exposed wire with the tapes.



6. Place the box lid and fastness with screw driver.

Product Introduction



Material list

Unit:cm

Material Bag A



A01 Wooden board (original) 1piece
0.5*10.5*14.6



A02 Wooden board (white) 1piece
0.5*10.5*11.7

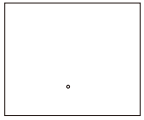

A03 Wooden board (white) 1piece
0.5*11.7*14.1



A04 Transparent cover
0.15*10.5*14.6 (1piece)



A05 Transparent cover
0.15*11.7*14.1 (1piece)



A06 Transparent cover
0.15*9.85*11.7 (1piece)

A07 Printing paper
(3pieces)

Material Bag B



B01 Wooden log(white)
0.5*0.5*7.2 (2pieces)



B02 Wooden log(white)
0.5*0.5*9.6 (2pieces)



B03 Wooden log(white)
0.4*0.4*8.5 (5pieces)



B04 Wooden bead(blue)
0.4*1.5*4(2pieces)



B05 Wooden log(blue)
0.4*0.4*4(6pieces)



B06 Wooden log(blue)
0.4*0.4*3 (2pieces)



B07 Wooden bead(white)
0.4*0.4*2.8 (1piece)



B08 Wooden bead(white)
0.4*1.5*6.5 (1piece)



B09 Wooden bead(blue)
0.3*1.8*6.5 (1piece)



B10 Wooden log (blue)
0.2*2*2.5(1piece)



B11 Wooden log (white) 2pieces
0.2*1.8*3



B12 Wooden log(white)
0.2*0.5*1.8 (1piece)



B13 Wooden log (blue) 1piece
0.2*1.8*1.8



B14 Wooden log (blue) 2pieces
0.2*2*4.5



B15 Wooden log (blue) 1piece
0.2*2*4.1



B16 Wooden log (white) 1piece
0.2*2*4.1



B17 Wooden log (white) 2pieces
0.2*1*2.4



B18 Wooden log (blue) 2pieces
0.2*1*2



B19 Wooden log (white) 2pieces
0.2*1*2



B20 Wooden log (blue) 1piece
0.2*1*2.2



B21 Wooden bead -round shape (white) 1piece
0.2*4*4

B22 Wooden log(white)
0.2*0.3*3.5 (2pieces)

B23 Wooden log(white)
0.2*0.3*4.2 (2pieces)

B24 Wooden log-round shape
Φ=0.3*4 (1piece)

Material List

Unit:cm

 C01 Cloth (blue/white) 6*10 (1piece	 C02 Cloth(dark blue) 6*15 (1piece)	 C03 Linen cloth (white) 1piec 6*6	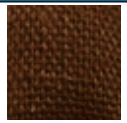 C04 Linen cloth (brown) 1piece 6*6	 C05 Cotton(white) some	 C06 Iron wire(golden) long=20 (1piece)	 C07 PVC sheet (transparent) 1piece 3*3
 C08 Cardboard(white) 8*8 (1piece)	 C09 Cloth (blue) 6*10 (1piece)	 C10 Plastic bead (pink) 1piece	 C11 Plastic bead (transparent) 1piece	 C12 Ribbon(green) long=14 1piece	 C13 Plastic bead (red/white) 1piece	 C14 Plastic bead (color) 1piece
 C15 Plastic bead (white) 2pieces	 C16 Plastic bead (white) 1piece	 C17 LED buld (3pieces)	 C18 Battery box (black) 1piece	 C19 Adhesive paper (white) 1piece	 C20 Sand paper 1piece	

Installation of dust proof cover

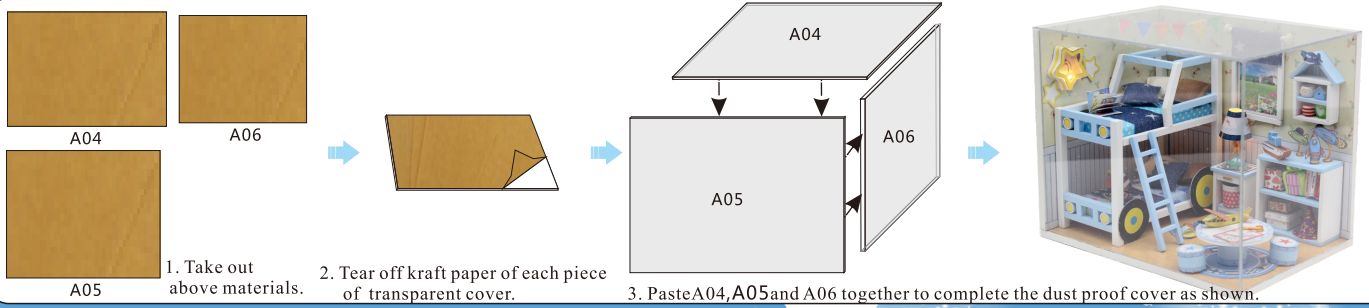

1. Take out above materials.

2. Tear off kraft paper of each piece of transparent cover.

3. PasteA04,A05and A06 together to complete the dust proof cover as shown.

Bunk bed



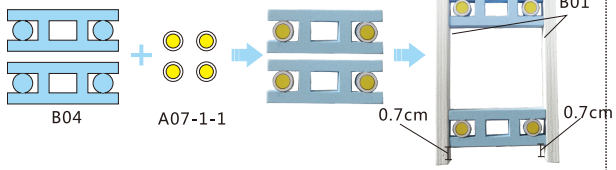

1.Attach A07-1-1 on B04, B06 on B01 as shown.

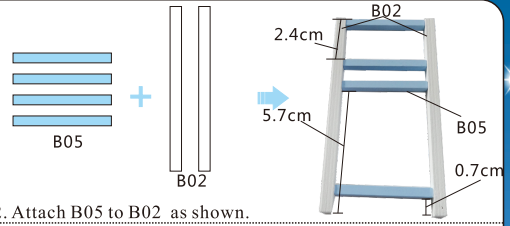

2. Attach B05 to B02 as shown.

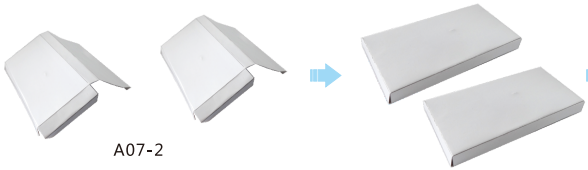

3.Cut out A07-2 and fold it as shown.

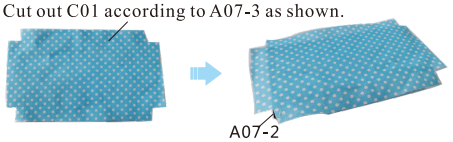

4. Cut out C01 according to A07-3 and cover up the A07-2 with C01 as shown.

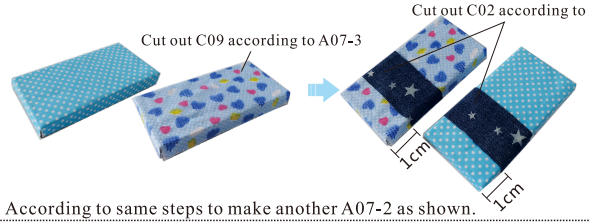

5. According to same steps to make another A07-2 as shown.

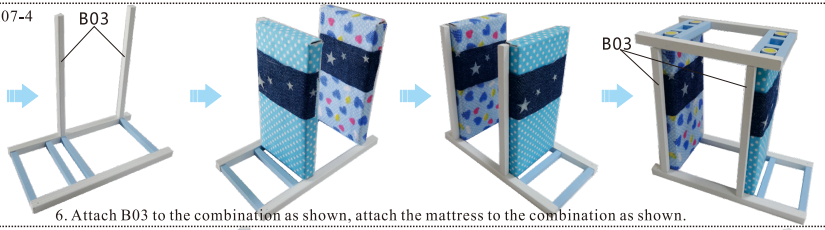

6. Attach B03 to the combination as shown, attach the mattress to the combination as shown.

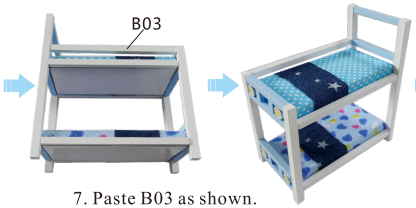

7. Paste B03 as shown.



8. Attach B05 to B08 as shown.



9. Cut out C08 according to A07-1-2 and attach to the combination as shown.

Bunk bed

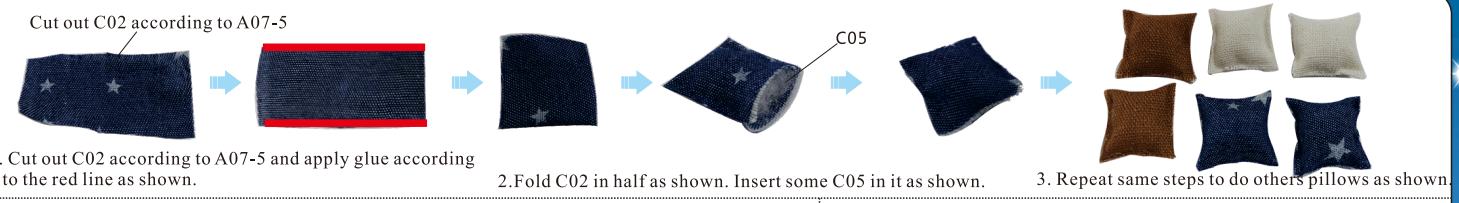

1. Cut out C02 according to A07-5 and apply glue according to the red line as shown.

2.Fold C02 in half as shown. Insert some C05 in it as shown.

3. Repeat same steps to do others pillows as shown.



4. Fold A07-6 in a “Z” form according to the lines to make books as shown.

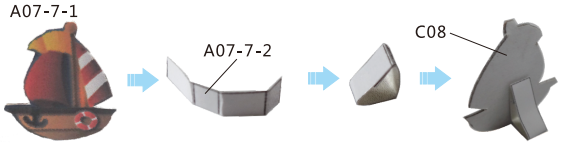

1. Attach A07-7-1 on C08 and cut out it , fold A07-7-2 as shown and attach it on A07-7-1 as shown.

Bedside table



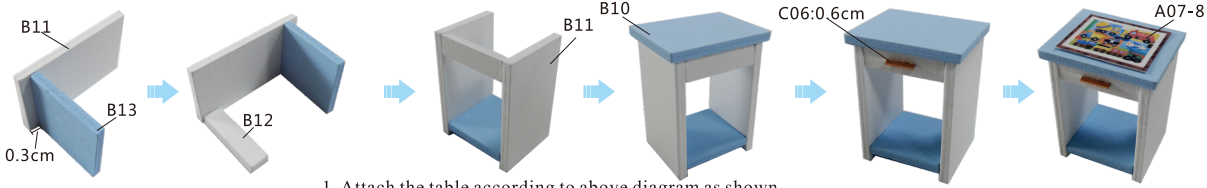

1. Attach the table according to above diagram as shown.

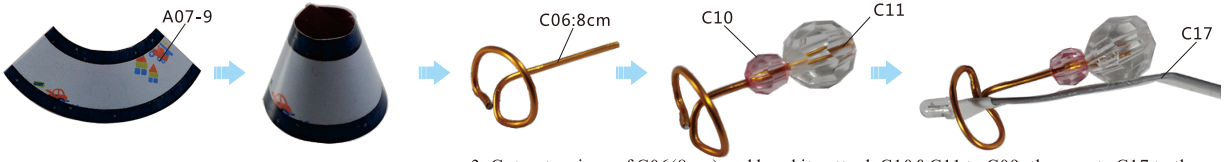

2. Cut out A07-9 and fold it as shown.

3. Cut out a piece of C06(8cm) and bend it , attach C10&C11 to C09, then paste C17 to the combination as shown.

Bedside table

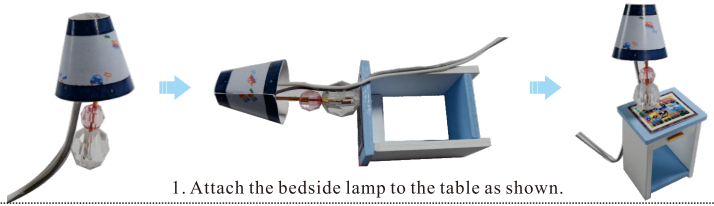

1. Attach the bedside lamp to the table as shown.



2. Fold A07-10-2 as shown. Attach A07-10-1 and A07-10-2 together as shown.

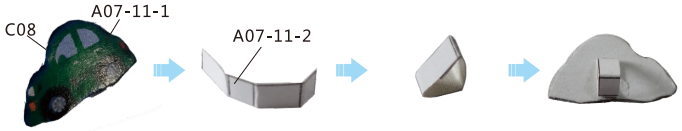

3. Attach A07-11-1 on C08 and cut out , cut out A07-11-2 and fold it as shown.
Paste A07-11-2 to A07-11-1 as shown.



4. Fold A07-12 and attach well as shown.

Wall shelve



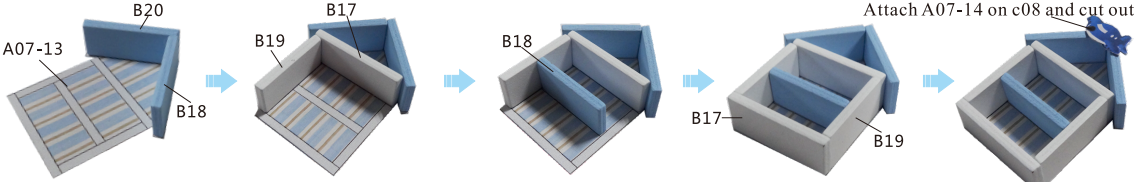

1. Attach B17,B18,B19 and B20 on A07-13 to do shelve form, attach A07-14 on C08 and cut out , attach it on the shelve as shown.

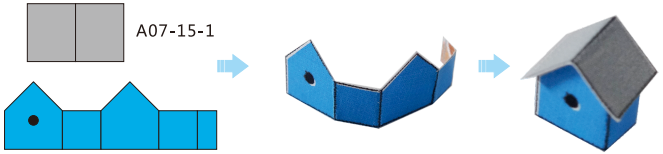

2. Fold and attach A07-15-1 and A07-15-2 to do the house model.



3. Attach A07-16 on C16 as shown.

Shelving



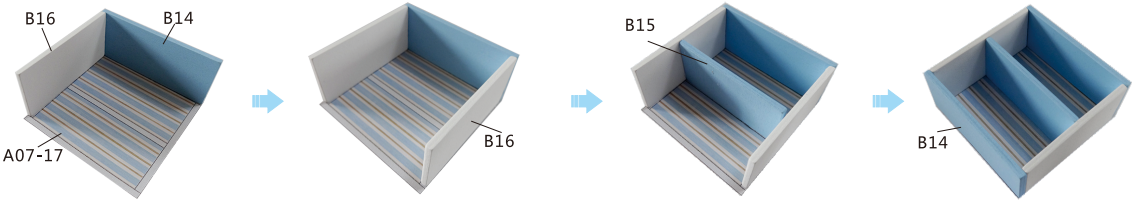

1. Attach B14,B15,B16 on A07-17 to make the shelving.



2.Fold A07-18-1 and A07-18-2 as shown in the diagram to make the box.

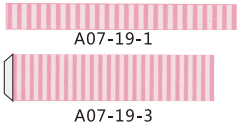

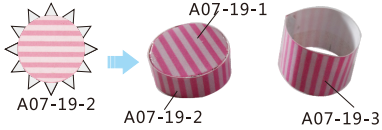

3. Fold A07-19-1,2,3 as shown.

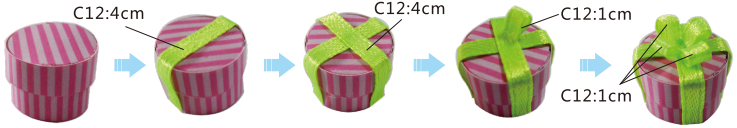

4. Cut out two pieces of C12(4cm),attach it to the box as shown.

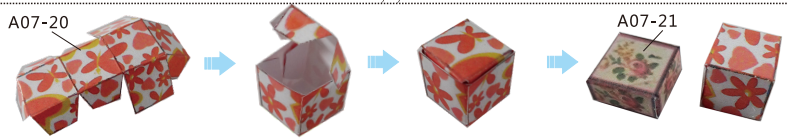

5.Fold A07-20 and A07-21 as shown in the diagram to make two boxes.

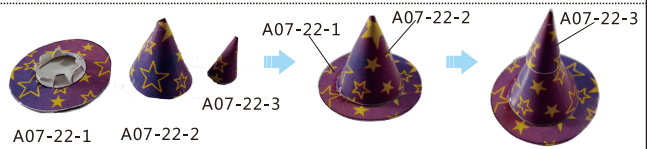

6. Attach A07-22-1,2,3 together as shown.

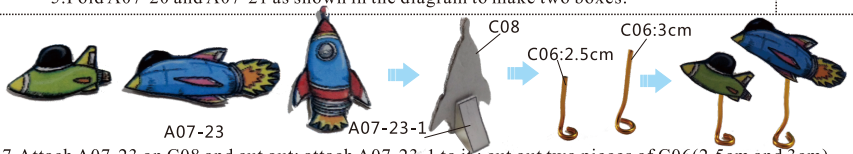

7.Attach A07-23 on C08 and cut out; attach A07-23-1 to it ; cut out two pieces of C06(2.5cm and 3cm) and bend it, attach A07-23 on it as shown.

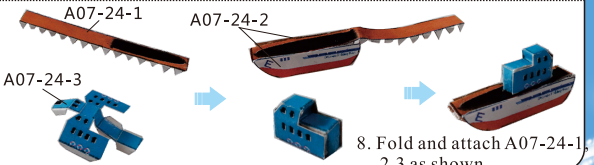

8. Fold and attach A07-24-1, 2,3 as shown.

Table





1.Attach A07-25-1 on B21, paste A07-25-2 on the bottom as shown.

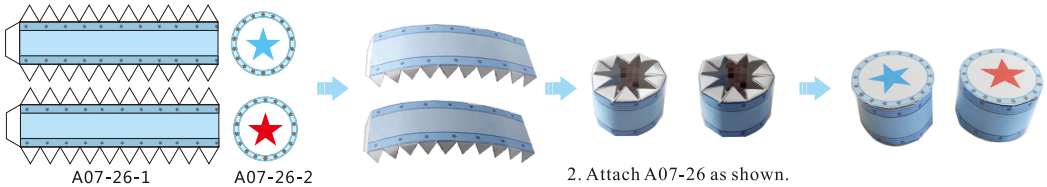

2. Attach A07-26 as shown.

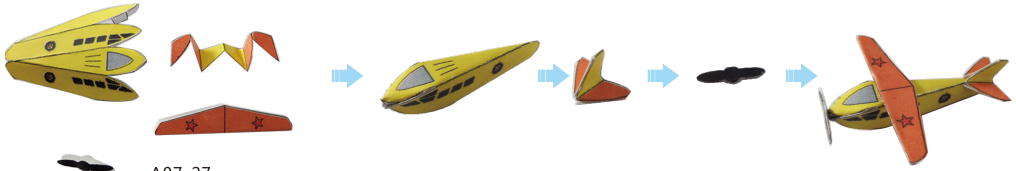

3. Attach A07-2 as shown to make the airplane model.



4.Cut out a piece of C06(3.5cm) and bend it as shown.

Window

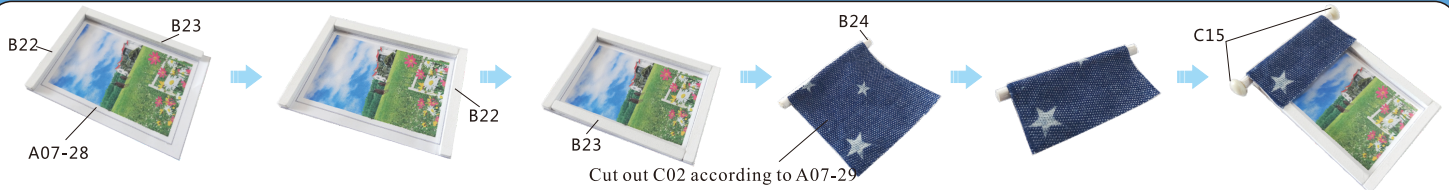

Cut out C02 according to A07-29

1. According to above diagram to make the window.

Slippers & Wall lamp



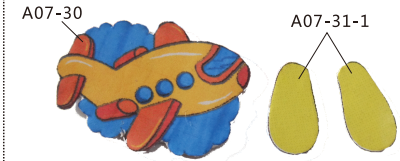

1.Attach A07-30 and A07-31 on C08 and cut out as shown.

2. Attach A07-31-2on A07-31-1 as shown.

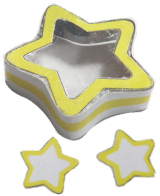

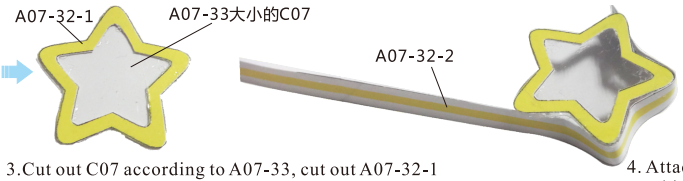

3.Cut out C07 according to A07-33, cut out A07-32-1 as shown.

4. Attach A07-32-2 to the combination as shown.

5.Attach A07-31-3 on C08 and cut out.

Outer frame

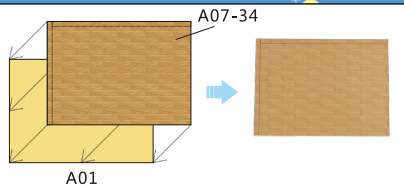

1. Attach A07-34 on A01 as shown.

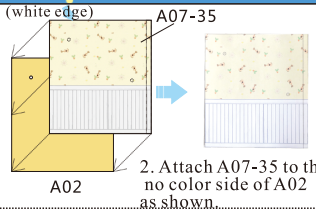

2. Attach A07-35 to the no color side of A02 as shown.

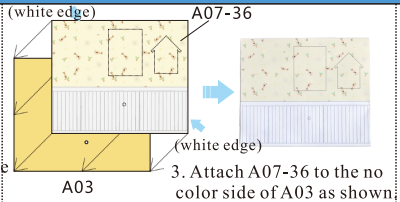

3. Attach A07-36 to the no color side of A03 as shown.

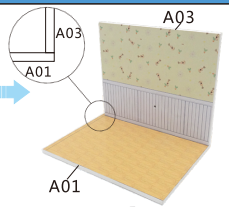

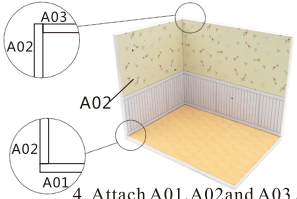

4. Attach A01,A02and A03 as shown.



5. Install C17 on A02 as shown. fix power wire of the bedside lamp on A03 as shown.



6.Cut off all power wires to right size.





7. Peel off the skin at the end of each power wire. Twisted the same color of power wires together as shown.

Outer frame

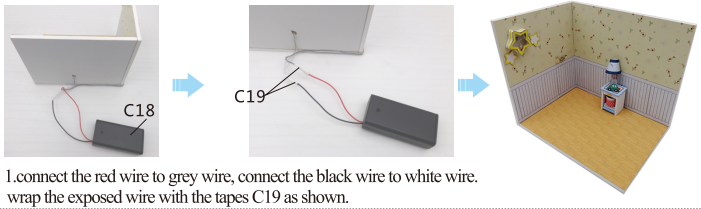

1.connect the red wire to grey wire, connect the black wire to white wire.
wrap the exposed wire with the tapes C19 as shown.

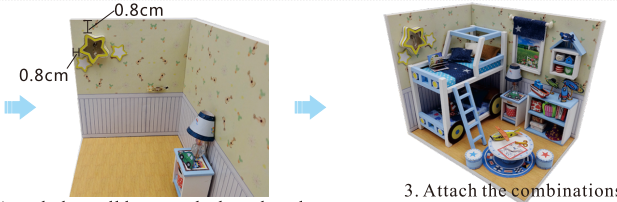

2. Attach the wall lamp to the board as shown.

3. Attach the combinations to the frame as shown.



A07-36

4. Use the excess power wire (8cm),attach A07-36 as shown to make the little flag.

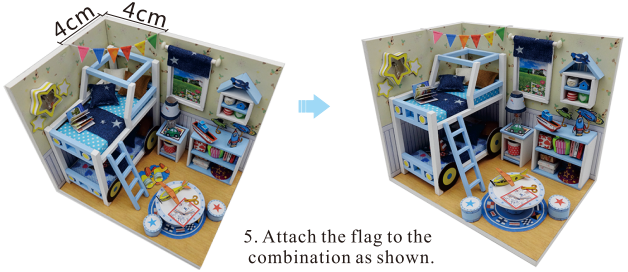

5. Attach the flag to the combination as shown.

Photo Gallery

